

BF2D · BF2.3D Maintenance Schedule

REGULAR SERVICE PERIOD(3) Perform at every indicated month or operating hour interval, whichever comes first.			Each use	First month or 10 hrs.	Every 6 months or 50 hrs.	Every year or 150 hrs.
ITEM						
Engine oil	Check level	<i>See Owner's Maintenance Information.</i>	●			
	Change			●	●	
Gear case oil	Change	<i>See Owner's Maintenance Information.</i>		●	●	
Starter rope	Check	<i>See Owner's Maintenance Information.</i>			●	
Carburetor linkage	Check-adjust			● (2)	● (2)	
Valve clearance	Check-adjust					● (2)
Spark plug	Check-adjust	<i>See Owner's Maintenance Information.</i>			●	
	Replace		Every 200 hrs.			
Propeller and cotter pin	Check		●			
Anode metal	Check		●			
Idling speed	Check-adjust			● (2)	● (2)	
Clutch shoes and drum (With clutch type)	Replace					● (2)
Swivel case lining and bush	Replace		Every 3 years (2)			
Water sealing	Replace		Every 3 years (2)			
Fuel line	Check		●			
	Replace		Every 2 years (If necessary) (2)			
Bolts and nuts	Check-tightness			● (2)		● (2)
Lubrication	Grease	<i>See Owner's Maintenance Information.</i>		● (1)	● (1)	
Fuel tank and tank filter	Clean				● (2)	
Crankcase breather tube	Check					● (2)
Emergency stop switch	Check		●			

(1) Lubricate more frequently when used in salt water.

(2) These items should be serviced by your servicing dealer.

(3) For professional commercial use, log hours of operation to determine proper maintenance intervals.