

BF4AH · BF5AK2 - BF6AH Maintenance Schedule

REGULAR SERVICE PERIOD(3) Perform at every indicated month or operating hour interval, whichever comes first. ITEM			Each use	After use	First month or 20 hrs.	Every 6 months or 100 hrs.	Every year or 200 hrs.
Engine oil	Check level	See Owner's Maintenance Information.	●				
	Change				●	●	
Gear case oil	Change	See Owner's Maintenance Information.			●	●	
Starter rope	Check	See Owner's Maintenance Information.				●	
Carburetor linkage	Check-adjust				● (2)	● (2)	
Valve clearance	Check-adjust						● (2)
Spark plug	Check-adjust	See Owner's Maintenance Information.				●	
	Replace						●
Propeller and cotter pin	Check		●				
Anode	Check	See Owner's Maintenance Information.	●				
Idling speed	Check-adjust				● (2)	● (2)	
Lubrication	Grease				● (1)	● (1)	
Fuel tank and tank filter	Clean						●
Thermostat	Check						● (2)
Fuel filter	Check					●	
	Replace						●
Fuel line	Check		●				
	Replace		Every 2 years (If necessary) (2)				
Bolts and nuts	Check-tightness				● (2)	● (2)	
Crankcase breather tube	Check						● (2)
Cooling water passages	Clean	See Owner's Maintenance Information.		● (4)			
Water pump	Check						● (2)
Emergency stop switch	Check		●				

(1) Lubricate more frequently when used in salt water.

(2) These items should be serviced by your servicing dealer.

(3) For professional commercial use, log hours of operation to determine proper maintenance intervals.

(4) When operating in salt water, turbid or muddy water, the engine should be flushed with clean water after each use.